

9-3 SS Programming Options / TECH-II & SID Profiler

SID Profiler Adjustments (User Programmable)

* Rain Sensor:

Desc.: Rain Sensor Sensitivity of Rain Sensor can be adjusted

Settings:

Rain Sensor High: The wipers will operate when there is a small amount of rain on windscreen.

Rain Sensor Medium: Default Setting of Rain Sensor

Rain Sensor Low: Wipers will operate when there is a greater amount of rain on the windscreen as compared to High & Medium settings.

* Theft Alarm:

Desc.: Theft Alarm Settings/Trigger settings

Settings:

Full Theft Alarm: Default Setting Provides full theft alarm security. including Interior Movement, Vehicle Tilt, Door/Bonnet/Boot opening detection.

Door Alarm Only: Enables customer to select Door Alarm activation only when pet is in the vehicle, vehicle transported on a ferry, or during adverse weather conditions which may trigger alarm..

* Climate Control:

- Rear Defroster

Settings:

Auto: Default Setting that provides automatic selection of Rear Window and Door Mirror demist, based on ambient temperature.

Manual: To activate Defroster, Driver will need to press the Rear Window Defrost Button

- Heated Seats

Settings:

Auto: Seat Heating will be switched on automatically when the ambient

temperature is below 15° c and the seat temperature is below 20° c (defaults to temperature level 2, driver can adjust to level 1 or 3 which will be saved)

Manual: Default Setting. The Driver presses the Seat Heating switch and adjusts the seat heating to the required Temperature Setting
3= approx 56° C Setting 2 = 46°C Setting 1= 39°C

- Fan Setting High Speed

Settings:

Medium Speed: Default Setting ACC will adjust the fan speed according to the conditions.

Low Speed: ACC will adjust the Fan Speed according to the conditions, however, Fan speed will be slightly lower than if fan speed High or Medium was selected.

High Speed: ACC will adjust the fan speed according to the conditions however, this setting will provide the driver with slightly higher fan speeds than Medium & Low

- Air Distribution Auto

Settings:

Auto : Default Setting. Automatically directs the Air Outlet to the Windscreen, Air Vents Face or Floor dependant on ambient temperature and setting.

Manual: Provides the Driver with the option of selecting the appropriate Air Outlet

- AC Mode Auto

Settings:

AC Auto: Default Setting Automatic engagement and disengagement of Air Conditioning Compressor.

AC Off: Turns the Air Conditioning Compressor off to save Fuel.

In this mode no cooling or dehumidifying is available and the windscreen may fog up. Pressing the Auto or AC button (above 5°C) will reactivate compressor. However, the AC compressor will be remain off the next time the vehicle is started.

- Dual Single Zone

Settings:

Dual Zone : Default Setting Provides for the setting of individual temperatures between Driver & Passenger zones.

Single Zone: Adjustment of the Driver's temperature will also adjust the passenger's temperature, however if the passenger temperature is altered the system will revert to Dual zone

until the vehicle is switched off. On restarting the vehicle, single zone will result.

- Climate Control Default Setting

Settings:

Yes / No: Allows the driver to quickly reset all adjusted ACC parameters to the original default settings

* System Settings

- Language

Settings:

Desired language of the SID and the Infotainment System

- Units

Settings:

km/h or mph

- Speed Scale illumination

Settings:

In nightpanel mode illuminate 0-140 km/h or 0-260 km/h

- Service Information Select Appropriate Language

Settings:

Service Data detailing Oil Quality and Time for Service can be viewed.

Tech 2 Adjustments: (NOT User Programmable)

* Panic Alarm

Desc.: Disables or Enables the Panic Alarm via remote control

* Trunk Unlock

Desc.: What happens when the trunk button on the remote is triggered

Settings:

Single Press Unlock+Open: Single press of the remote or door switch will unlock and open boot

Single Press unlock / Double Press Open: Single press of the remote or door switch will unlock; double press will unlock and open boot.

* Trunk Lock After Closing

Desc.: What happens to the trunk lock when closing it.

Settings:

Yes: Automatically lock Boot on closing

No: Boot can be reopened using micro switch button located on the trunk/boot

* Trunk Lock After Drive Off

Desc.: Should the trunk be locked at drive off or after 30 sec.?

Settings:

Yes: Trunk/Boot will automatically lock when vehicle increases speed

No: Trunk/Boot will remain closed, however will be in the unlocked condition if No was selected in the previous option.

* Door & Trunk Unlock at Key Out

Desc.: When the is removed from the center console should door/trunk be unlocked?

Settings:

Yes: All Doors & Trunk/Boot will Unlock when the Key is removed from the Ignition Switch If Driver frequently locked all Doors when

driving

this feature would be beneficial.

No: Doors and Boot will remain in the same condition as they were prior to Key removal

* TSL Locking Logic (Theft Security Locking/Deadlock)

Settings:

TSL at first Press: Default Setting. All Doors will lock in Deadlock Mode

TSL at Second Press: All Doors will lock in Deadlock mode at the second press of the Remote.

* Lock /Unlock Acknowledge

Settings:

None : No acknowledge will be visible

Indicators: Indicators will blink as acknowledge

* Follow Me Home Function

Settings:

Tail Light: When selected Tail Lights will be illuminated

Back Up Light: When Selected Reverse Light will be activated

Tech 2 Body Exterior Lighting & Horn

=====

* High Beam Follow me home Active Time

Desc.: Follow Me Home Active Time can be adjusted between 0- 10 minutes

Settings:

This Feature can be turned on or Off .Yes / No can be selected.

Low Beam Automatic / Low Beam also in Position 0 (light switch)

Yes / No

Follow Me Home Active Time

- Daytime Driving Lights can be activated

* Parking Lights

Settings:

Act as Lead Me To the Car Light.

* Park Light On Reminder

Settings:

On / Off

If Ignition is turned Off and the parking lights are active, Driver will be warned if set to on.

* Show Trailer Light Outage

Desc.: REC will detect blown trailer light and display on SID

Settings:

Yes or No

* Trailer Light / Fog Light off

Settings:

Yes: Fog Light Rear will be disabled When Trailer is connected
Yes
No

* Horn Lock Unlock Acknowledge

Settings:

On: Horn will honk when car is locked

Off: Horn will not honk if car is locked

Tech 2 Body Locking

=====

* Panic Alarm Activation (Vehicles fitted with /Alarm only)

- Panic Button / Locking Switch

Central Locking Switch Driver /Passenger

Settings:

- Panic Button on Remote and locking switch inside vehicle will activate alarm

- Panic Button will activate Alarm only

- Locking Switch inside vehicle (driver /passenger will activate alarm only

- No Panic Alarm function required.

* Unlock Logic

Settings:

All at first press : All Doors will open & Fuel Lid will unlock if the
Driver or Passenger Door Switch is activated

Driver Door & Fuel Lid at first press : Only the drivers Door will unlock
& Fuel Lid will unlock when door
switch is activated

* Remote unlocking One Press

Settings:

All at first press: All Doors will open & Fuel Lid will unlock if the
Remote is pressed

Driver door & Fuel Lid at first press: Only the drivers Door will unlock &
Fuel Lid will unlock when the Remote
is pressed

Tech 2 Body Front Wipers & Washers

* Additional Wipes

Desc.: Below this Vehicle Speed Adjustment / Used after washing the windscreen.
System will activate an additional wipe to remove excess water run off.
Therefore Driver can wash screen without turning wiper on to wipe runoff.
The Vehicle Speed at which the additional wipe feature cancels can be set.
Number of Wipes after wash Number of Wipes after wash is programmable.
The number of wipes can be set between 0-10.

Settings:

Wiper/Extra Wipe Enable:

Yes: Extra Wipe enabled

No: Extra Wipe not enabled

Front Washer: Number of Wipes after wash Number of wipes can be
set between 0-10 Recirculation for 30 seconds after wash

* Bi Xenon Only Washer activation time

Settings:

Yes / No

* Washer activation 1

Reduces or increases the amount of washer solution dependant on driving conditions Washer activation time for the first wash can be set between .1-2.0 seconds

* Washer activation 2

Desc.: Reduces alcohol smell during windscreen washing.

Settings:

Yes: Recirculation activated to reduce washer solution alcohol smell
(AC/ACC recirculation)

No: No Recirculation during windscreen wash

Washer activation time for the second wash can be set between .1-2.0 seconds

* Headlight Washer Blocking Time (Bi Xenon only)

Desc.: Headlight Washer Blocking Time ; Determines the time required before an additional headlight wash will be performed

Settings:

Default setting is 2 minutes. Driving conditions may dictate less or more time before a subsequent wash is actioned. Adjustment between 0 seconds-infinity.

Tech 2 Body Heating & Ventilation

=====

* Air Distribution Floor Mist Delay at Start Up

- Open Defrost in Hot Climate: Yes /No

Delays the Air Distribution to the screen on start up to reduce fogging the inside of the screen. Select yes to allow air to be directed to screen during AC cooling operation.

Select No if Screen is fogging up on the outside of the screen during AC operation and high humidity.

Air Flow Fan Mist delay at Start Up 0-30sec.

- Recirculation Semi Auto Yes /No

Recirculation Manual Yes / No

Recirculation After Wash 30seconds Yes /No Delays fan operation for selected time to reduce screen fog up ACC will control recirculation, can be overridden by manual selection, however, will revert to Automatic on start up. Recirculation or Fresh will be Manually

selected and maintained on next start. Alcohol smell from washer fluid is reduced.

- Rear Demist
Rear Demist Activation Time 5min - 20minutes

Tech 2 Body Theft Protection

- Drivers Door Doors & Trunk will unlock at key out
- Door Lock if not opened.
- Door Switches Unlock Function Yes/No
Door will automatically lock if unlocked and not opened.
These are the same adjustment items as unlock logic.
Passenger Door Same as Drivers Doors Adjustment items
Rear Left Door Same as Drivers Doors Adjustment items
Rear Right Door Same as Drivers Doors Adjustment items